



**Kawasaki**  
**Versys vSystem**  
C.A.R.B. E.O. No. D-674



www.scottoiler.com



Technical Support



technical@scottoiler.com +44 (0) 141 955 1100

Register your limited warranty online @ [www.scottoiler.com/guarantee](http://www.scottoiler.com/guarantee)



Visit our pages on Facebook, YouTube, Twitter, Pinterest and Google+

v3.3

### 1a. Vacuum Connection - Bikes with EVAP Canister




**Hint:** Place a Scottoil sticker on the chain guard to alert mechanics to the presence of a Scottoil system.

New models of motorcycles sold in Europe from 2016 onwards, and models sold in California, are equipped with evaporative emissions canisters which collect petrol vapor from the petrol tank.

On these models there will be a vacuum hose from the engine to this canister, and also a hose from the petrol tank to this canister.


Model specific details can be found at [www.scottoiler.com](http://www.scottoiler.com)

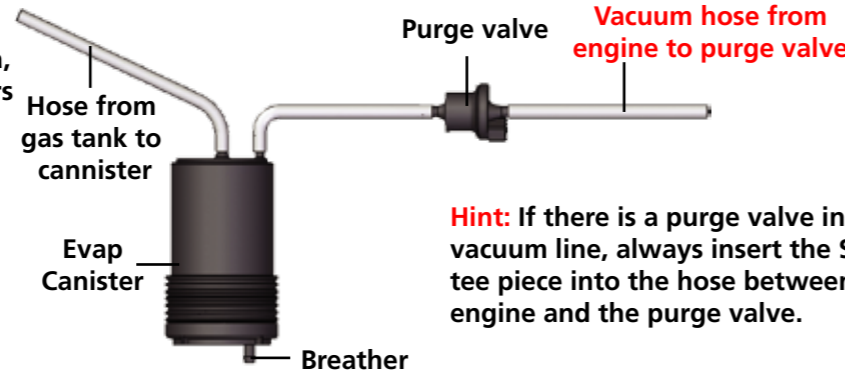

**Hint:** If there is a purge valve in the vacuum line, always insert the Scottoil tee piece into the hose between the engine and the purge valve.

Locate the vacuum hose from the engine to the purge valve. Cut into vacuum hose and insert T-piece. Fit the Scottoil vacuum tubing (part 3) into the small side of the damper elbow (part 4) & press the larger side of the damper elbow onto T-piece.

**Hint:** Ensure all connections are firmly made, and lubricate the damper elbow with a little Scottoil for easier installation.

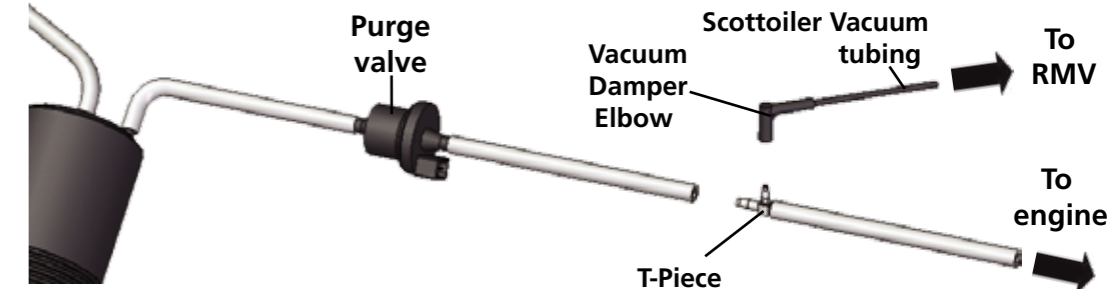


### 1b. Vacuum Connection - non EVAP

**Hint:** Model specific details and photos of vacuum connections can be found online at [www.scottoiler.com](http://www.scottoiler.com)

On the throttle bodies, pointing forwards, there is a rubber bung fitted over a spigot. Remove this rubber bung. Push the vacuum tubing into the small end of the grey vacuum damper elbow. Push the damper elbow onto the spigot.

**KLE 650 2015/16**

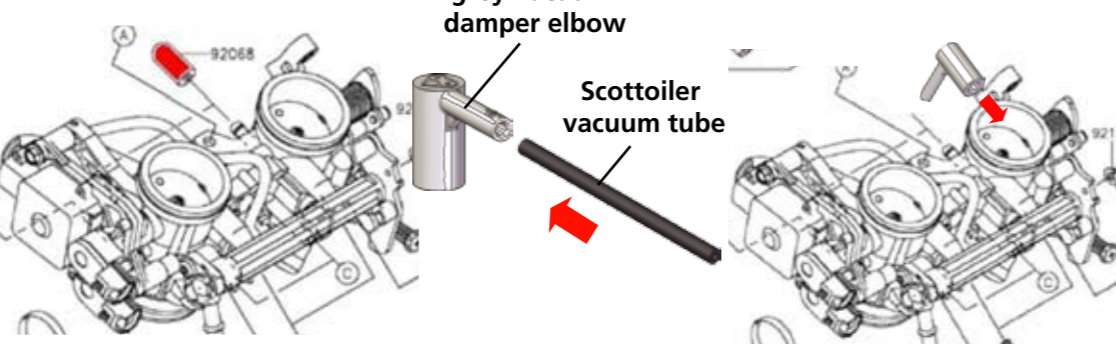

**KLE 1000 2015/16**



Remove upper left hand side panel



Cut vacuum pipe with green tape near the top at the rubber section.



Insert 6mm tee piece, and small black damper elbow.

### 1c. Vacuum Connection 2006 - 2014

**KLE650 2006 - 2014 / KLE1000 2012 - 2014**

On the each of the throttle bodies, there are rubber bungs fitted over spigots. Remove the one on cylinder#4. Push the vacuum tubing into the small end of the black vacuum damper elbow. Push the damper elbow onto the spigot. Route tubing neatly to RMV.

**Image shows the throttle body on the 4th cylinder, on the RHS of the bike.**




### 2. Dispenser Assembly



Incorrect installation can result in excessive oil fling

For ALL installations the optimum feed point is between the 5 & 7 o'clock on the face of the rear sprocket. Nib can be trimmed if necessary and should lightly touch the sprocket with slash cut facing out.


**Hint:** The plate can be carefully bent to allow the nib to touch the sprocket. Spin wheel forward and back to ensure nib cannot be trapped.

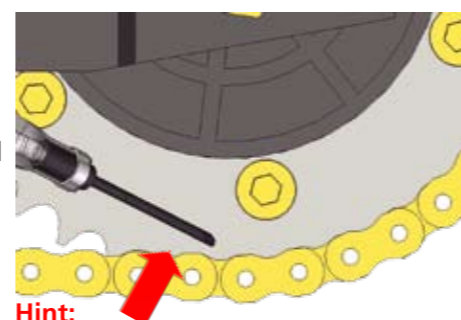


**Hint:** Nib should be touching sprocket with slash cut facing out.

**KLE 650 : 2015 onwards**  
**Bobbin Mount (parts 15 & 16)**

**All model 2014 and earlier,**  
**Bobbin Mount (parts 15 & 16)**

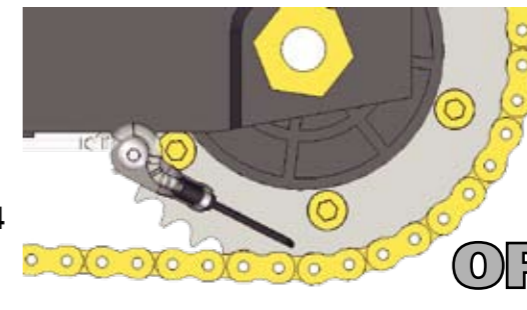

OR

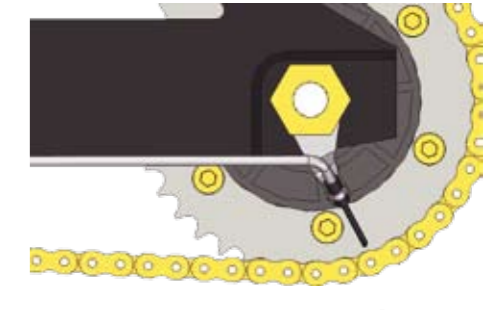

**KLE 1000: 2015 onwards**  
**Spindle Mount (parts 14 & 16)**


### 3. Reservoir Metering Valve (RMV)



Avoid hot exhaust / engine components and moving parts.

Mount RMV using cable ties or drill a hole and secure using fasteners. Both Filler hole on RMV & adjuster knob should be kept accessible for re-filling and future adjustment of flow rate.

**Hint:** the RMV should be mounted as vertical as possible to achieve maximum capacity.

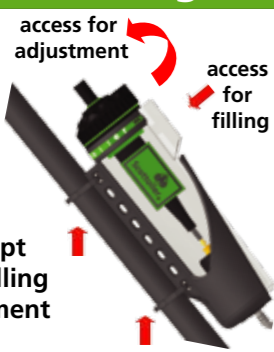

OR




Drill an M5 or M6 hole in the spine of the cage part (part 11) and secure using a suitable fastener.

**Important:** if fitting the RMV on the underside of a frame member, ALWAYS rotate it in the cage so that the filler plug is NOT pointing downwards.



### 4. Connections

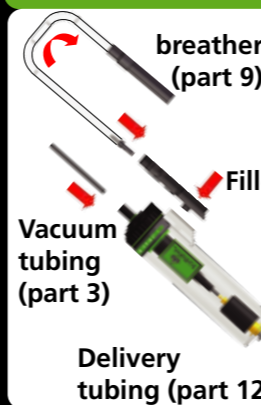


**Hint:** Don't fit fillerplug yet - see next page, fill RMV first.

**Hint:** Ensure all connections are firmly made

### 5. Tube Routing

Self adhesive clips (part 22) allow you to neatly route the delivery tubing (part 12) along flat surfaces e.g. the swinging arm. Clean and degrease the surface using the IPA wipe (part 21) provided before attaching. Press clip firmly down for approx 30 seconds to ensure a good bond.


Cable Ties (part 12) can be used to secure vacuum tubing to existing wiring or to the frame or sub-frame to route neatly to the RMV. Take care not to pinch the tubing by over tightening.

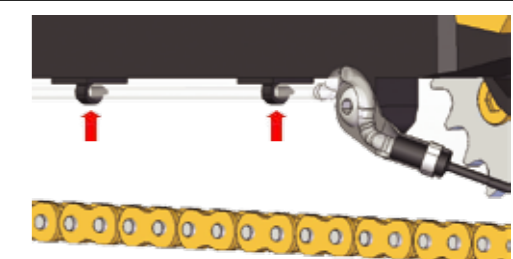

**continued over**

## 6. RMV Filling

Remove the black rubber fillerplug part (part 2) from the side of the RMV.

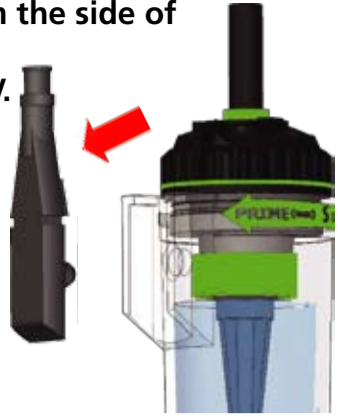

Fit the spout to the bottle of Scottoil and fill the RMV through the hole in the side of the reservoir.



## 7. Prime System

Never attempt to use compressed air to fill or prime your system.

Press Filler plug (part 2) into the RMV and turn the adjuster at the top of the RMV fully clockwise to "Prime" position.




Connect the spout to the Filler Plug. Squeeze the bottle of oil to pressurise the system. This will force oil down the delivery tubing. Squeeze until there are no bubbles.



Hint: Hold bottle upright

## 8. Set Flow Rate

Refit the filler plug and breather. Route the breather up and over, with the end pointing downwards to prevent water ingress. Start your bike. Adjust the flow until approx. 1 drop per minute is achieved. Check flow after a short journey, & adjust if necessary.

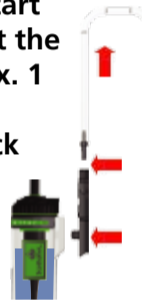


Hint: 1 drop per minute provides the optimal flow rate



Top Tech Tip:

For best results, clean the chain thoroughly with paraffin and a nylon brush. Manually drizzle Scottoil along the length of the chain and wipe off any excess. The flow from the RMV then simply tops up this initial coating.

## Parts List

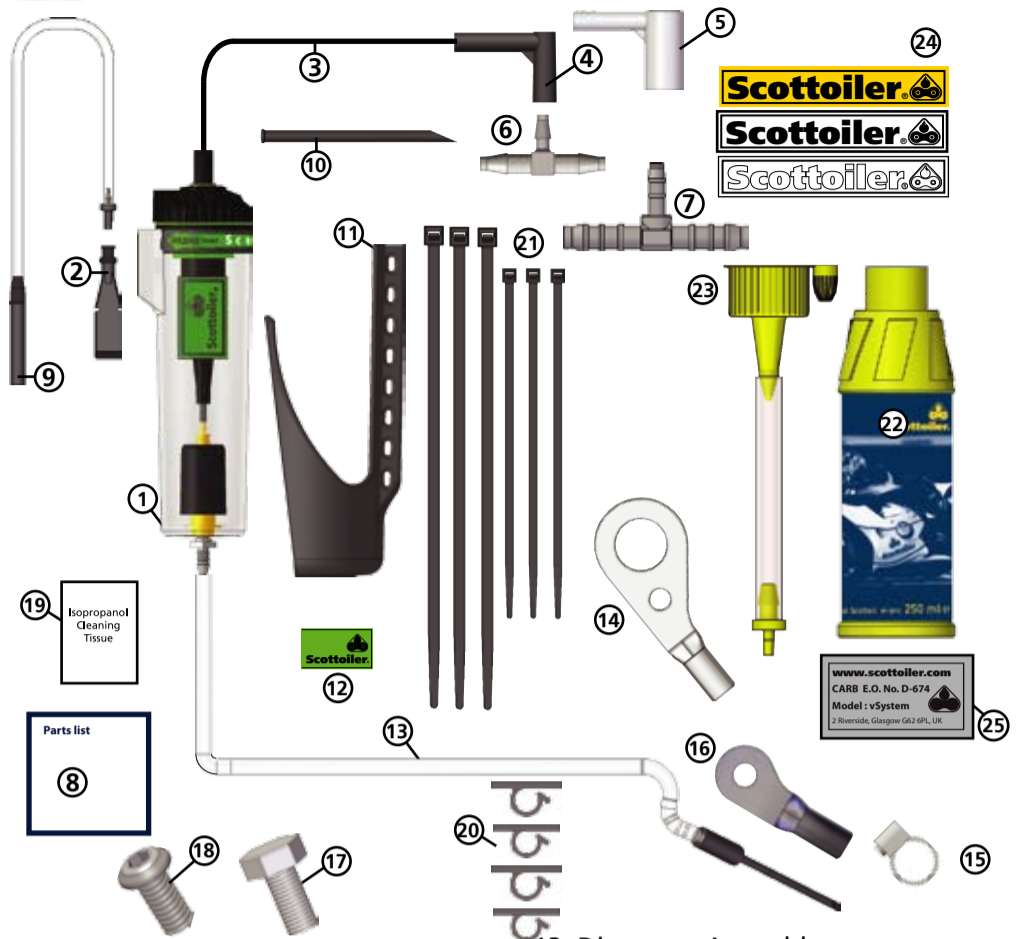

1. RMV (Reservoir Metering Valve)	(SO-0022)	13. Dispenser Assembly	(SA-0024)
2. Filler Plug	(SA-0040)	14. Dispenser Plate	(RM-150060)
3. Vacuum Tubing (Black)	(SC-0051)	15. Dispenser Plate Clip	(RM-150065)
4. Vacuum Damper	(SA-0100)	16. Small Dispenser Plate 10mm	(RM-150063)
5. Grey Vacuum Damper	(SA-0104)	17. M10 Fine Pitch Screw	(RM-150146)
6. T-Piece (4mm)	(RM-150005)	18. M8 Socket Button Head Screw	(RM-150143)
7. T-Piece (6mm)	(RM-250150)	19. IPA Wipe	(RM-100125)
8. Instructions	(RM-250091)	20. Adhesive Clips (x4)	(SA-0175)
9. Breather Assembly	(SA-0010)	21. Cable Ties (x6)	(SA-0015)
10. Spare Nib (x2)	(SA-0075)	22. 250ml Scottoil	(SA-0008)
11. RMV Cage	(SA-0600)	23. Filling / Priming Spout	(SA-0126)
12. Sticker (place on chainguard)	(RM-050121)	24. Scottoiler Stickers (assorted.)	
		25. CARB E.O. Sticker	(RM-150217)

Scottoiler (Scotland) Limited, 2 Riverside, Milngavie, Glasgow G62 6PL


## Limited Warranty

All Scottoiler products are guaranteed to be free from defects in materials and workmanship for a period of two years from date of purchase.

Please register your product online at [www.scottoiler.com/guarantee](http://www.scottoiler.com/guarantee) to verify the date of purchase.

**Important:** Do not tamper with, modify or dismantle any part of your Scottoiler system. Such actions could damage the product, and/or your motorcycle, and may invalidate the product warranty.

## How It Works

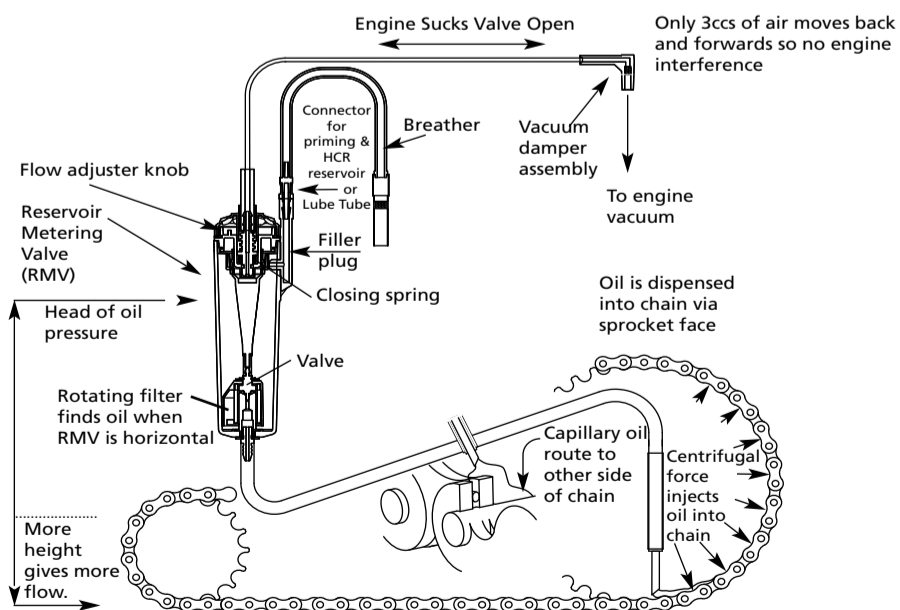

**How does the Scottoiler work?** The Scottoiler vSystem is vacuum operated. When the motorcycle engine is running vacuum is generated, this lifts a diaphragm which in turn opens the valve. Whilst open the valve allows oil to drip feed under gravity down the delivery tube to the chain via the rear sprocket. There is metering built into the valve to provide adjustment to control the rate at which oil is dispensed. It is not a pump.

**How does this affect the engine?** It doesn't. The Scottoiler's output is not affected by engine speed, throttle opening and so on. The vacuum chamber is a sealed unit and does not affect the running of the bike. Upon starting the engine the valve will open, this requires 3cc of air to be moved in order to lift the diaphragm, which stays up until the engine is switched off. It is not unusual to see the diaphragm pulsating with very low revs, particularly on singles and twins, don't confuse this for a pumping action, it is not a pump.

## Frequently Asked Questions (FAQs)

**1. Which products are suitable for my bike?** Visit our website [www.scottoiler.com](http://www.scottoiler.com) and select your bike 'Manufacturer' and 'Model'. Select the kit you want and download the installation guide PDF. Occasionally an adapter will be required. This will be detailed on the installation PDF.

**2. What oil should I use to refill my Scottoiler?** In ambient temperatures between 0 and 30 degrees Celcius (32 and 86 degrees Fahrenheit) we recommend Scottoil Traditional - Blue and in ambient temperature between 20 and 40 degrees Celcius (68 and 104 degrees Fahrenheit) we recommend Scottoil High Temperature - Red. Scottoil features a very low tack additive thus not attracting dirt. Scottoiler cannot guarantee the compatibility of our systems using any other manufacturers oils as the materials used are tested for compatibility with Scottoil only.

**3. When should I refill my RMV (Reservoir Metering Valve)?** If you refill the oiler before it runs dry you won't have to prime the dispenser tube. The Reservoir Metering Valve takes around ten seconds to top up with 50ml of oil which should last up to 1,500 miles.

**4. Can I increase the capacity?** Yes, the Magnum High Capacity Reservoir increases capacity by up to eight times. The HCR is fitted behind the number plate and the combined increased capacity will give up to 10,000 additional miles between refills. Alternatively, the Lube Tube flexible high capacity reservoir increases combined capacity by up to four times. The Lube Tube can be fitted into any dead space on the bike and will mean up to 6,000 additional miles between refills.

**5. Will the Scottoiler only oil one side of my chain?** No. The oil is fed to the chain via the sprocket face where it splits over the inner side plates. Some of the oil is diverted onto the o-rings and the remainder feeds under the roller onto the bushing. Capillary action will then draw the oil across the chain. For best results load the chain with oil from the bottle or a rag after cleaning and then apply approx 1 drop per minute to maintain this film of oil.

**6. Will I get oil on my tyre?** No, A flow rate of approximately one drop per minute applied via the sprocket face will provide an oil-film which will not pollute the running surface of the tyre and will give a dramatic improvement in chain life. In conditions where high levels of dust, sand or heavy rain are present more oil flow will be necessary to extend chain life.

**7. When do I need to adjust flow?** Temperature change will alter the flow rate of the oiler. The oil will flow more quickly in warm temperatures as it will get thinner. The oil will flow more slowly in cold temperatures as it will get thicker. It is important to monitor the flow rate with temperature change and adjust flow accordingly.

**8. I want to move my Scottoiler onto my new bike, are the spare parts available separately?** Yes, the full range of spare parts, fittings and accessories are available online at [www.scottoiler.com](http://www.scottoiler.com)

**9. Does this system satisfy the requirements of the Californian Air Resource Board?** Yes. Scottoiler have submitted the vSystem kit to the Californian Air Resource Board and have received an Exemption Order (E.O.). The E.O. number is printed on the enclosed sticker (Part 25). This sticker should be fixed to the bike near the reservoir (RMV) or actually onto the reservoir (RMV) itself to comply with the CARB requirements for this product.

**Important:** Do not tamper with, modify or dismantle any part of your Scottoiler system. Such actions could damage the product, and/or your motorcycle, and may invalidate the product warranty.