



www.scottoiler.com

Technical Support



technical@scottoiler.com



+44(0)141 955 1100

SA-0026 Additional Dispenser Assesmbly - Ducati

Multistrada 1200 to 2014 :-

1. Fit the M6 washer (part 10) inside the large hole on the dispenser plate (part 11). Remove the screw on the underside of the swing arm (which secures the slipper strip.) Fit the dispenser plate and washer between the slipper strip and the swing arm and secure using the original bolt.




2. Secure the black dispenser assembly (part 20) to the dispenser plate (part 11) by clamping around the black nylon sleeve using the jubilee clip (part 12). Carefully position the nib between 6 and 8 o'clock, on the outside face of the rear sprocket with the slash cut facing away from the sprocket.

Take care to avoid the sprocket bolts.



2015 Multistrada 1200, Multistrada 1000 & 1100; Monster 1100; Panigale; 848; Hypermotard; 1098; 1198 & Diavel:- 1. Remove the screw on the underside of the swingarm (which secures the slipper strip.) Fit the small dispenser plate (part 21) between the slipperstrip and the swing arm and secure using the original bolt.

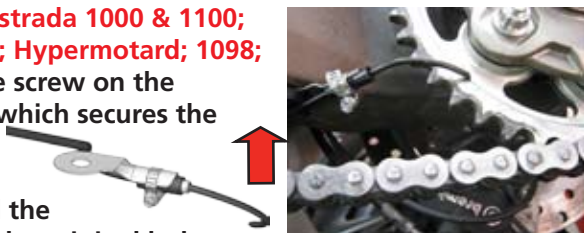


2. Secure the black dispenser assembly (part 20) to the small dispenser plate (part 21) by clamping around the black nylon sleeve using the jubilee clip (part 12). Carefully position the nib between the 6 and 8 o'clock position on the outside surface of the rear sprocket, with the slash cut facing away from the sprocket. Take care to avoid sprocket bolts.

3. Route the slim black nylon delivery tubing through the brake line tunnel and mushroom the end by holding over a small flame. (See next section.) Fit the 1m length of clear delivery tubing (part 19) to the spigot on the bottom of the RMV. Ensure it is pushed fully home. Route clear tube to meet black nylon delivery tube, trim & fit.




4. Mushroom the end of the small dispenser assembly by holding it close to the flame of a match or lighter, and turning it so that an even 'mushroom' shape is formed. This will act as a barb.

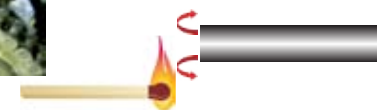

Once cool, trim clear tube to length and push the newly mushroomed end in 1cm.

PARTS LIST

- 1) 1m clear delivery tubing
- 2) Small dispenser assembly

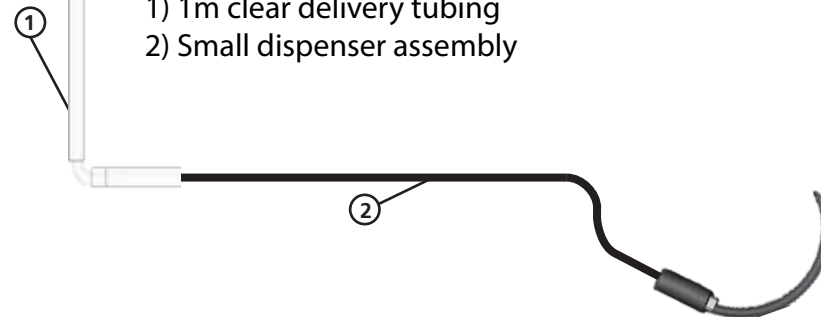

Follow the general fitting instructions for all other aspects of the installation.