

SA-0096 Husqvarna Nuda 900 Adapter Kit, 2012 onwards



SA-0103
Vacuum Damper Assembly



RM-100084
M6 x 50mm screw



RM-100003
10 degree spacer



RM-150130
M6 washer




RM-100080
M6 nyloc nut

Note: only the vacuum connection and dispenser are bespoke to this model. Follow general fitting instructions in the vSystem kit everywhere else.


Vacuum Connection

1. Locate the vacuum bung on the bottom of the airbox, in the middle of the bike.

The end of the bung can just be seen behind the vacuum pipe from the throttle body to the airbox.

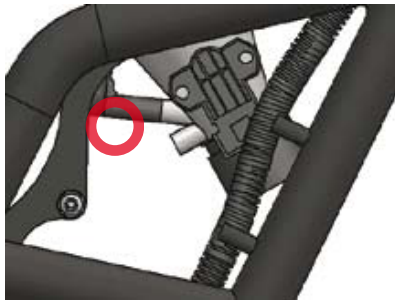


2. Remove the vacuum bung using long nose pliers.

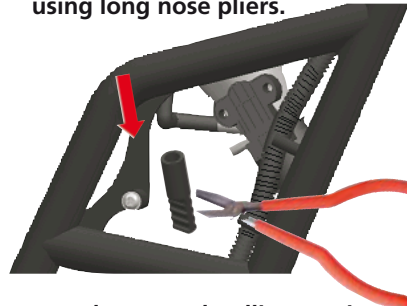


Use a downward pulling motion, do not use a sideways motion.

3. Push the black vacuum tubing from the kit into the damper elbow (SA-0103). Then firmly press the damper elbow onto the spigot on the airbox, until it can go no further.

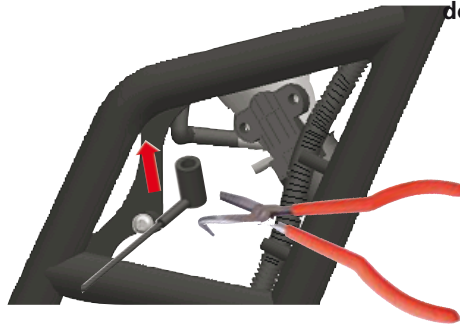


Follow the vSystem instructions for fitting the reservoir. The cage can be mounted to the frame or under the seat.

Dispenser Assembly


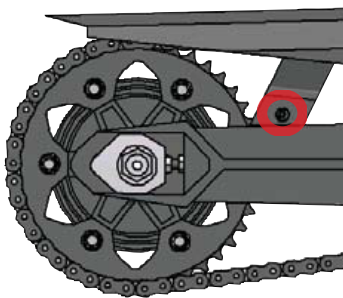


1. Remove the rear chain guard mounting bolt using a T30 Torx wrench, it is not necessary to remove the chain guard itself.

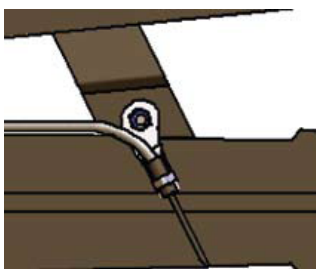

3. Secure the dispenser assembly to the Dispenser Plate, by clamping around the black nylon sleeve using the Dispenser Plate Clip

2. Using the M6 x 50 screw screw the chain guard into place. Fit the 10 degree spacer then then the Dispenser Plate followed by the M6 washer and nyloc nut. See section 4 for nib position before tightening.

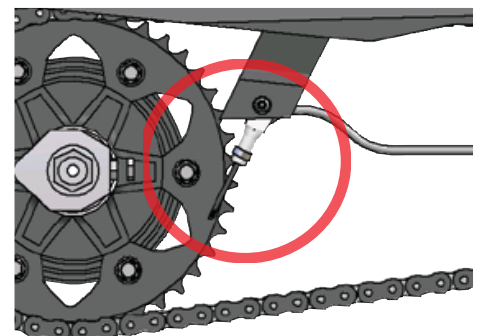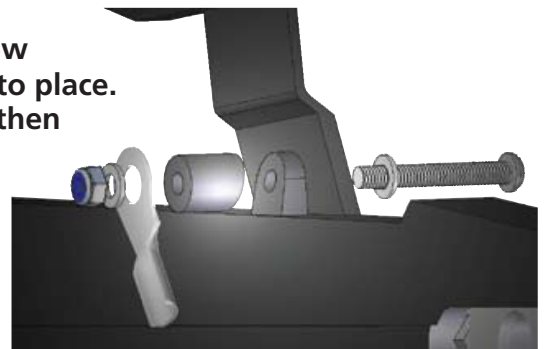

4. Position the nib between 3 & 4 o'clock on the outside face of the rear sprocket, with the slash cut facing away from the sprocket. Avoid sprocket bolts.