Scottoiler: Triumph T-Piece with Viton

Installation Guide for using SA-0155

The Triumph special T-Piece with Viton, shown left, is for use in models which have corrugated vacuum pipes, as shown below left.

These models include: **All fuel injected models from 1997 onwards with 955i / 955cc engines, Speed 4, TT600 & 2000 onwards Tiger (955).**

Cut into the pipe indicated by the Installation Guide for that particular model, insert the ends of the cut pipe into the Viton rubber tubes and press the pipes in as far as possible.

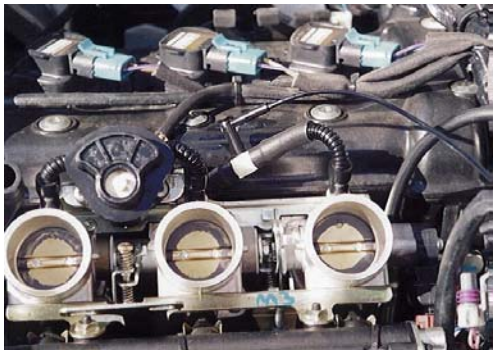

Then press the Damper Elbow, part number 4 from the Scottoiler kit, onto the third leg of the T-Piece, as shown in the third picture.

Note: Take care when positioning T-Piece or routing vacuum tubing not to foul the throttle mechanism, ensure throttle can operate throughout full range before riding the bike.

Finally, have you tried our **FS365 anti corrosion spray**? It's a surfactant corrosion inhibiter that can be easily sprayed all over your bike to protect it from corrosion, all year round.

Its great at getting into all the nooks and crannies protecting your bike from rust and road salt, summer and winter & polishing up to a nice shine.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.
Scottoiler Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com